

GUARANTEED NEVER TO HURT OR FALL OUT



1 Insert sound tunnel.

2 Twist into place.




For a Getting Started video featuring TwistLock® in action, scan the QR code or visit yurbuds.com/inspire-twistlock

Our earbuds fit differently than other brands in that they are designed to fill the bowl of your ear with the sound tunnel extending down into your ear canal. They are not meant to be pushed down into the ear canal. The back of the bud should brace lightly against the back of the bowl of your ear.

FIT ENHANCERS TO EARPHONE



1 Wrap left enhancer around left earphone. Repeat for right side.

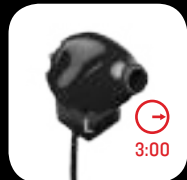

2 Start with the left bud and rotate sound tunnel between 3-4 o'clock position. Adjust for comfort.



3 Repeat with the right bud and rotate sound tunnel between 8-9 o'clock position. Adjust for comfort.

TO CLEAN ENHANCERS: Remove & wash with warm soapy water

NEED ANOTHER SIZE?



If the earbuds are not perfect, send us your picture for a FREE personalized fit. Take a photo of your current earbuds in your ear and email it to orders@yurbuds.com. yurbuds will send you the correct size for free, or exchange your model for a better-fitting option.

CONTACT US:
900 Spruce St. Suite 550
St. Louis, MO 63102, USA
www.yurbuds.com/contact

CALL US TOLL FREE:
(888)YUR-BUDI or
(888)987-2831

PRODUCT RETURNS: Please contact yurbuds for customer support before returning to store.

LIMITED YURBUDS WARRANTY

yurbuds™ purchased from authorized retailers are warranted against defects in materials and workmanship for a period of ONE year from the date of purchase of the product. If a defect exists, yurbuds™, at its discretion and to the extent permitted by law will (1) repair the product at no charge, or (2) replace the product if it is irreparable. This warranty excludes damage resulting from abuse, accident, modifications or other causes that are not defects in materials and workmanship. **THIS WARRANTY DOES NOT AFFECT YOUR STATUTORY RIGHTS.** Visit yurbuds.com for our complete product warranty policy.

The use of mobile devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products. For details on GUARANTEED NEVER TO FALL OUT see yurbuds.com/legal.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions:

1. This device may not cause interference, and
2. This device must accept any interference, including interference that may cause undesired operation of the device.



CONNECT WITH US.



POWER & PAIR

POWERING ON/OFF

- 1 Briefly press and hold the Center button on the 3-Button Control.

- GREEN FLASH WITH AUDIBLE ALERT: Power on, Not Paired
- EXTENDED BLUE FLASH WITH AUDIBLE ALERT: Powered Off

PAIRING

- 2 FIRST TIME USE: LEAP Wireless will automatically be set to pairing mode. Skip to step 4 to complete set-up.

CONSECUTIVE USES: Begin with LEAP Wireless powered off and your Bluetooth device powered on and in search mode.

- 3 Press and hold the Center button on the 3-Button Control for an extended period of time, until the light is alternately flashing green and blue indicating it is pairing mode.

- 4 Select "yurbuds LEAP Wireless" on your device.

- BLUE & GREEN FLASH: Pairing Mode
- BLUE FLASH: Power on, Paired



*Green light flashes rapidly when pairing in low power mode

MUSIC & CALLS

- | | |
|-----------------------------|----------------------------|
| VOLUME | TRACK |
| Volume Up: 1 Click | Next Track: Long Press |
| CALLS | Pause/Play: 1 Click |
| Answer/End Calls: 1 Click | |
| Voice Activation*: 2 Clicks | |
| VOLUME | Previous Track: Long Press |
| Volume Down: 1 Click | |



*Compatible with iOS only

CHARGE


- 1 Locate the charging port at the top of the right earphone.
- 2 Lift cover for USB charging port.
- 3 Plug in device with the provided charging cable.



- FLASHING GREEN: Indicates Charging
- SOLID GREEN: Indicates Fully Charged

CHARGE STATUS

- On-Screen Indicator* shows level of charge.

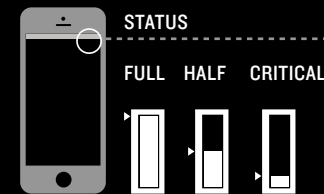

AUDIBLE ALERTS

Status provided once when battery is low.

FOR MORE INSTRUCTIONAL DETAILS FOR YURBUDS LEAP WIRELESS, PLEASE VISIT YURBUDS.COM



 yurbuds®

THANK YOU
and welcome to yurbuds